


# (-) Negative DOME LIGHT circuit for HIGH CURRENT dome lights.. Using the # 775 relay

Note \*\* if your unit DOES NOT have a DIP Switch, the DOMELIGHT SUPERVISION wire is Pre-set as a (-) Negative Output, just connect it to the 775 Relay as shown below:

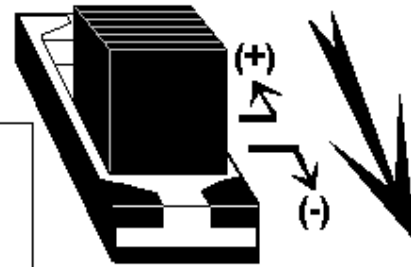

Set DIP Switch for a (-) NEGATIVE Output on PURPLE wire from 16-Pin Harness

