

INSTALLATION GUIDE

•

OWNER'S GUIDE

TALKING ALARM • MODEL 2003

CONTENTS

System Features.....	1
Technical Assistance	1
Installation Instructions.....	1-2
Operating Instructions	2-3



Technical Assistance

All tech personnel are expertly qualified to answer any technical questions.
Technicians are available Monday through Friday from 9:00 a.m. until 8:00 p.m. and Saturday 10:00 a.m. until 4:00 p.m.

Address

288 Canton Avenue • Wintersville, Ohio 43953

Telephone

Phone: 740-264-4710 • 800-878-8007 • Fax: 740-264-7306

SYSTEM FEATURES

One Piece Self-Contained Only One Wire	Fast and easy to install, usually 5 to 10 minutes with no experience. Fits virtually any vehicle.
Two Long Range Four Button Remote Controls	Remotely activates alarm in chirp or voice mode. Slide protection stops accidental alarm activation.
Extra Loud Siren	Deters thief from further tampering.
Battery Back-Up (Optional)	Alarm will continue to sound even with vehicle battery disconnected.
Current Sensing	Alarm will sound with changes in current. EXAMPLE: Dome light or ignition switch
Electronic Dual Stage Shock Sensor	Will warn away without going into full alarm.
Talking Alarm	Demands authority and attention compared to non-talking alarms.
Instant Panic Mode	Should you feel threatened you can remotely activate, with a press of the remote transmitter, a woman's voice shouting "Please Help Me", and siren sounding.
Remote Car Finder	Helps you locate your vehicle in crowded parking lots by chirping the siren 8 times.
Automatic Alarm Reset	If the alarm is violated, it will stop and rearm itself after 30 seconds.
Scan Deterrent	Protects your car from scanning devices sometimes used by thieves to disarm alarm systems.
Passive Arming	Automatically arms the system 1 minute after the last door is closed.
High Theft Area	When parking in potentially high theft areas, you may program your alarm to say "system armed" every 30 seconds.
Limited Lifetime Warranty	Guarantees life-long protection.

TECHNICAL ASSISTANCE

Should you need help. First check our website at www.bulldogsecurity.com/wires.htm or call our toll-free Tech Support Hotline Monday through Friday 9AM-8PM and Saturday 10AM-4PM EST at 800-878-8007.

You must give the following information:

- Name
- Telephone Number with Area Code (Fax number if applicable)
- Year, Make, and Model of the vehicle
- The model number of the system you are installing
- The type of assistance you are requesting

If you give the above information you will be called back as soon as possible, usually within 10 minutes.

INSTALLATION INSTRUCTIONS

1. Locate a solid, well grounded metal surface under the hood. Any metal fender, firewall, or metal plate will do. For the loudest sound, the siren should point down. **CAUTION:** Do not mount close to exhaust or other high temperature areas. Make sure the alarm as well as the metal it's mounted to is solid with no moving parts nearby. The siren should not point straight up, as moisture could collect in the siren horn and damage the system. (See figure #1)
2. Use three self-tapping screws (included) to secure alarm. Screw into a well grounded metal surface. **CAUTION:** You must use all 3 screws. (See figure #2)

3. Connect the Red power wire with the supplied alligator clip to any constant +12 volt supply. (Example: Battery) If installation is correct, alarm will say "Thank You". (See figure #3)
4. (Optional) For even greater protection, you may now install a 9-volt alkaline battery. This would allow your alarm to operate in the event of a dead or disconnected battery. **CAUTION:** Optional battery back-up may be installed only after steps 1 - 3 are completed.
5. For maximum range, keep the Yellow antenna wire straight and as far away from metal as possible.
6. **CAUTION:** If for any reason you disconnect the power, you must disconnect the 9-volt battery. When reinstalling, the red wire must be connected before the optional 9-volt battery is installed.

Figure 1

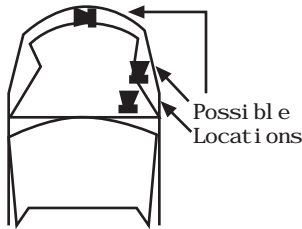


Figure 2


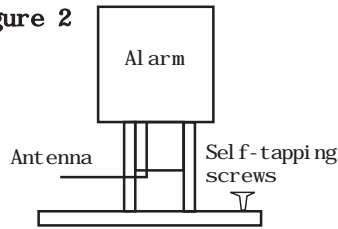


Figure 3

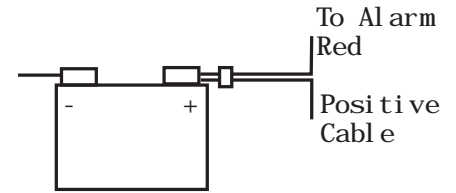

OPERATING INSTRUCTIONS

NOTE: Before operating your alarm, slide the protector down (attached to the back of your remote transmitter) snap off the back and snap to the front.

Arming

Press transmitter button #1 (Arm Talk). The alarm will set and a man's voice will acknowledge by saying "System Armed". **NOTE:** Your alarm will ignore all violations; current and shock, for approximately 45 seconds after you arm it.

Disarming

Press transmitter button #1 (Arm Talk) again to disarm. Alarm will disarm and a man's voice will acknowledge by saying "System Disarmed". **NOTE:** If the vehicle was tampered with while the alarm was set, the alarm will have sounded for 30 seconds, shut off and then rearmed itself. When disarmed the alarm will say "System disarmed, I was tampered with". This is a good time to inspect the vehicle for forced entry marks, paint dings or scratches, and check to be sure a wheel isn't partially removed, etc. Button #2 (Arm Chirp) does the same as button #1, except there is no voice. (Example: 1 chirp to arm, 2 chirps to disarm, 3 chirps if impact occurred while the alarm was set, 4 chirps for current sensing)

Adjusting the Shock Sensor

NOTE: The factory setting on the shock sensor should be acceptable for most vehicles. To adjust the shock sensor, disarm the system, press and hold transmitter button #3 (finder) until the alarm says "Please Adjust Sensor Now" (approximately 5 seconds), immediately release the button. Tap your hood above the alarm at the sensitivity level you wish. The harder you hit the car the less sensitive the alarm will be. The alarm will then say "Thank You". The shock sensor is now set at this sensitivity. Any shock that is equal to or greater will sound the alarm. Set the sensitivity as often as you wish; however, the sensitivity level will remain set until the battery is disconnected or you reset it. If you do not tap the car it will automatically go to maximum sensitivity. This setting is only acceptable if the car is parked inside a garage.

Dual Stage Shock Sensor

A single shock will cause the alarm to respond "You are too close to the vehicle, please move away". Continued tampering will cause the alarm to respond "I was tampered with", and the siren will sound.

Car Finder

While the system is armed, press and release transmitter button #3 (finder). The alarm will chirp 8 times. This is used to locate your vehicle in a crowded parking lot.

Instant Panic

Press and release transmitter button #4 (panic) to sound the instant panic alarm. A woman's voice shouts "Please help me" and alarm sounds for 30 seconds. To stop the alarm before the 30 seconds, press any of the 4 transmitter buttons. This feature functions at all times; whether the alarm is armed or disarmed, or the engine is off or running.

Special Situations

Sometimes when you park your car in heavy rain, near a construction zone, near trucks, etc. you may wish to lower the sensitivity of your alarm for this arming only. When arming with transmitter button #1, to lower the sensitivity by 50% press transmitter button #2 within 2 seconds your alarm will say "Thank you" indicating it accepted your command. To shut the shock sensor off completely, press transmitter button #2 twice within 2 seconds your alarm will respond by saying "Thank you" twice indicating it received your command. When arming with transmitter button #2, simply reverse the procedure. The next time the alarm is set it will go back to the original setting.

Setting the Current Sensor

Disarm the system. Press and hold transmitter button #4 (panic) until the alarm chirps 2 times (Approximately 5 seconds). This indicates that current sensing is now turned off. To turn Current Sensing back on: Disarm the system. Press and hold transmitter button #4 (panic) until the alarm chirps 1 time (Approximately 5 seconds). This indicates that current sensing is now turned on. **NOTE:** Factory setting is ON.

Automatic (Passive) Arming

To activate passive arming, press and hold down transmitter button #2 (arm chirp) for 10 seconds. Alarm will respond with a tone and then say "system armed". Your alarm will automatically arm itself in 60 seconds after each time you turn off your engine. After disarming your system, you have approximately 60 seconds to start your motor before the alarm will rearm itself. To deactivate passive arming, press and hold down transmitter button #2 (arm chirp) for 10 seconds. The alarm will respond with one tone and say "system disarmed". Your alarm now must be armed by using the remote transmitter.

High Theft Area

To make your alarm say "system armed" every 30 seconds, press transmitter button #3 (finder) immediately after arming your alarm with button #1 (arm voice). To make your alarm chirp twice every 20 seconds, simply press transmitter button #3 (finder) immediately after arming your alarm with transmitter button #2 (arm chirp). Either option will be for this arming only. The system will return to normal operation after it is disarmed. **NOTE:** If the vehicle is violated, a man's voice shouts "I was tampered with" and the siren sounds. After 30 seconds; if the violation stops, the alarm will stop and rearm itself.

Adding a New Transmitter

With the system armed, press and hold button #1. The system will respond "System Disarmed." Continue to hold until the unit responds "Thank You" (approximately 10 seconds). At this time, release button #1 and press any button on the transmitter you want to add. The alarm will respond "System Disarmed". Both transmitters will now operate the system.