

INSTALLATION GUIDE

•

OWNER'S GUIDE

ALARM • MODELS 801 / 802 / 803

CONTENTS

System Features.....	1
Technical Assistance	1
Installation Instructions	1
Operating Instructions	1-2



Technical Assistance

All tech personnel are expertly qualified to answer any technical questions.
Technicians are available Monday through Friday from 9:00 a.m. until 8:00 p.m. and Saturday 10:00 a.m. until 4:00 p.m.

Address

288 Canton Avenue • Wintersville, Ohio 43953

Telephone

Phone: 740-264-4710 • 800-878-8007 • Fax: 740-264-7306

SYSTEM FEATURES

One-Piece Self-Contained Only Two Wire	Fast and easy to install, requires only minutes with no experience. Fits virtually any vehicle.
Long Range Four Button Remote Transmitter	Remotely activates your alarm. Activates car finder and instant panic from a safe distance.
High Quality Siren	Extremely loud siren deters thieves from further tampering.
Current Sensing	The alarm will sound with changes in current. Example: Dome light or ignition switch.
State-of-the-Art Electronic Dual Stage Shock Sensor	Not sensitive to temperature or age, extremely sensitive to shock or glass breakage. (Example, a light tap and the alarm will chirp once. A harder shock and the siren will sound).
Instant Panic Mode	Should you feel threatened, you can remotely activate the siren with the press of a button.
Remote Car Finder	Helps you locate your vehicle in a crowded parking lot by chirping four times.
Automatic Alarm Reset	If the alarm is violated, it will stop and rearm itself after 30 seconds.
Scan Deterrent	Protects your car from scanning devices often used by thieves to disarm systems.
Limited Lifetime Warranty	Guarantees life-long protection.

TECHNICAL ASSISTANCE

Should you need help. First check our website at www.bulldogsecurity.com/wires.htm or call our toll-free Tech Support Hotline Monday through Friday 9AM-8PM and Saturday 10AM-4PM EST at 800-878-8007.

You must give the following information:

- Name
- Telephone Number with Area Code (Fax number if applicable)
- Year, Make, and Model of the vehicle
- The model number of the system you are installing
- The type of assistance you are requesting

If you give the above information you will be called back as soon as possible, usually within 10 minutes.

INSTALLATION INSTRUCTIONS

1. Remove the alcohol pad and wipe a clean spot on or near the battery.
2. Peel the protective coating from the back of the alarm and attach onto or near the battery.
3. Attach red clip to positive terminal and black clip to negative.

Note: If you have a cellular telephone, radar detector or other mobile radio equipment; such as stereo amplifiers, turn them off before you leave your vehicle. Otherwise, your alarm can detect the power drain and sound the alarm.

The transmitter has a maximum range of about 200 feet (60 meters). The actual range depends on your installation, the location of nearby metal objects, and the strength of the remote transmitter's battery. Normal range when installed is 50 to 100 feet.

OPERATING INSTRUCTIONS

Arming

Press button #1(arm) alarm will chirp 1 time and arm. NOTE: Your alarm will ignore all violations, current and shock, for approximately 45 seconds after you arm it.

Disarming

Press transmitter button #2 (Disarm). The system will chirp 2 times indicating the system is disarmed. If the vehicle is violated, the siren will sound. After 30 seconds if the violation stops, the alarm will stop and rearm itself. **NOTE:** If you hear 3 chirps when disarming, the vehicle experienced an impact violation while armed. If you hear 4 chirps when disarming, the vehicle experienced a current violation while armed. This is a good time to check your vehicle for possible damage or an attempted break in.

Adjusting the Shock Sensor

NOTE: The factory setting on the shock sensor should be acceptable for most vehicles. Disarm the system, press and hold button #3 (finder) until the alarm chirps 3 times, immediately release the button. (Approximately 10 seconds) Tap your hood above the alarm at the sensitivity level you wish. The harder you hit the car the less sensitive the alarm will be. Alarm will then chirp 2 times, the shock sensor is now set at this sensitivity. Any shock that is equal to or greater will sound the alarm. Set this feature as often as you wish, however the sensitivity level will remain set until the battery is disconnected or you reset it. If you do not tap the car it will automatically go to maximum sensitivity. This setting is only acceptable if the car is parked inside a garage.

Dual Stage Shock Sensor

A single shock equal or greater to the preset setting will cause the alarm to sound a warning chirp, continual tampering will cause alarm to sound.

Special Situation

Sometimes when you park your car in heavy rain, near a construction zone, near trucks etc. you may wish to lower the sensitivity of your alarm for this arming only. When arming your system to reduce the sensitivity by 50% press button #1 (arm) again within 2 seconds. To shut the shock sensor off completely, press button #1 (arm) twice within 2 seconds after arming. You will notice a decrease in tone of alarm when reducing the sensitivity. The next time the alarm is armed it will return to the original setting.

Instant Panic

Press and release button #4 (panic) for instant panic alarm. Press again to stop or it will stop after 30 seconds.

Current Sensing (Factory setting: on)

To turn off current sensor, alarm must be disarmed. Press and hold button #4 (panic) for 5 seconds. Alarm will chirp 2 times. Current sensor is now off. To turn on current sensing. Press and hold button #4 (panic) for 5 seconds alarm will chirp 1 time. Current sensor is now on.

Adding a New Transmitter

While the system is disarmed press and hold button #1 (arm) for approximately 10 seconds. The alarm will chirp 1 time. At this time press any button on the new transmitter you want to add. The siren will respond with a second chirp. Both transmitters will now operate the system.