
CHRYSLERS REVERSE POLARITY TRUNK POP DIAGRAM: Using a (-)NEGATIVE Trunk Pop Output

Requires (1) of part #775

Connect the WHITE and the YELLOW wire from the #775 relay to 12 volts CONSTANT fused at 10amps.

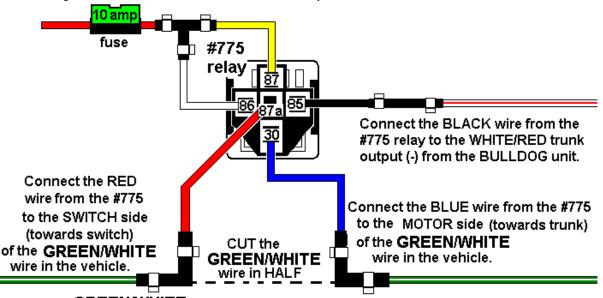


GREEN/WHITE wire from TRUNK POP switch in vehicle.

Using a (+) POSITIVE Trunk Pop Output:

RS-1100(114),1200, and 1300E

Requires (1) of part # 775

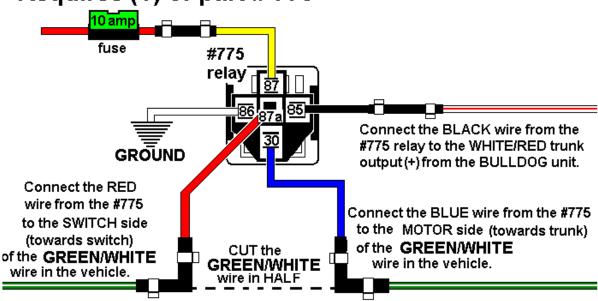

GREEN/WHITE wire from TRUNK POP switch in vehicle.